



**User's Manual**  
**VIX - N**

Uninterruptible Power System

## SAFETY – WARNING

- ★ This UPS utilizes voltages that may be hazardous. Do not attempt to disassemble the unit. The unit contains no user serviceable parts. Only factory service personnel may perform repairs.
- ★ Internal battery voltage is 12Vdc. Sealed, lead-acid, 6 cells battery.
- ★ Connection to any other type of receptacle other than a two-pole, three-wire grounded receptacle may result in shock hazard as well as violate local electrical codes.
- ★ In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.
- ★ Do not allow liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.
- ★ This unit intended for installation in a controlled environment (temperature controlled, indoor area free of conductive contaminants). Avoid installing the UPS in locations where there is standing or running water, or excessive humidity.
- ★ Do not plug the UPS input into its own output.
- ★ Do not attach a power strip or surge suppressor to the UPS.
- ★ Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.
- ★ To reduce the risk of overheating the UPS, do not cover the UPS cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.
- ★ Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
- ★ Do not dispose of batteries in a fire as they may explode.
- ★ Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- ★ A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
  - 1) Remove watches, rings, or other metal objects from the hands.
  - 2) Use tools with insulated handles.
  - 3) Wear rubber gloves and boots.
  - 4) Do not lay tools or metal parts on top of batteries.
  - 5) Disconnect charging source prior to connecting or disconnecting batteries terminals.
- ★ Servicing of batteries should be performed or supervised by technical and authorized personnel only. d the required precautions.
- ★ When replacing batteries, replace with the same number and type of sealed lead acid battery. The maximum ambient temperature rating is 40°C

## SPECIFICATION

MODEL		VIX400N VIX600N VIX800N	VIX1000N VIX1200N	VIX1500N VIX2000N
CAPACITY	VA	400VA	1000VA	1500VA
		600VA		
		800VA	1200VA	2000VA
INPUT	Voltage	110VAC/120VAC or 220VAC / 230VAC /240VAC		
	Voltage Range	81-145VAC or 162-290VAC		
OUTPUT	Voltage Regulation (Batt. Mode)	+/-10%		
	Frequency	50Hz or 60Hz		
	Frequency Regulation (Batt. Mode)	+/-1Hz		
	Output Waveform	Modified Sine wave		
BATTERY	Battery Type	12 V/4.5 AH x 1 12 V/7.0 AH x 1 12 V/9.0 AH x 1	12 V/7.0 AH x 2	12 V/9.0 AH x 2
	Recharge Time	6-8 hours to 90% after complete discharge		
TRANSFER TIME	Typical	2-6 ms		
INDICATOR (See Note 1)	AC Mode	Green LED lighting	Green LED lighting	The left green LED lighting & the 1st to 4th green LEDs gradually lighting indicating load level
	Battery Mode	Yellow LED Flashing	Yellow LED Flashing	The left green LED flashing & the 1st to 4th green LEDs gradually lighting indicating battery capacity
	Fault Mode	Red LED Lighting		
AUDIBLE ALARM	Backup Mode	Sounding every 10 seconds		
	Low Battery	Sounding every 1 second		
	Overload	Sounding every 0.5 second		
	Fault	Continuously sounding		
PROTECTION	Full Protection	Discharge, overcharge, and overload protection		
PHYSICAL	Dimension (mm), LXWXH	298x101x142	338x149.3x162	380x158x198
WEIGHT	Net Weight(kgs)	3.85/4.35/4.7	7.8/8.4	10.1/10.5
ENVIRONMENT	Operating Environment	0°C - 40°C		
	Noise Level	Less than 40dB		


Note 1: For LCD model please refer to section 3 “LCD” on page 3

### 3. Placement

Install the UPS unit in any protected environment that provides adequate airflow around the unit, and is free from excessive dust, corrosive fumes and conductive contaminants. Do not operate your UPS in an environment where the ambient temperature or humidity is high.




On the other hand, place the UPS away from the monitor at least 20cm to avoid interference.

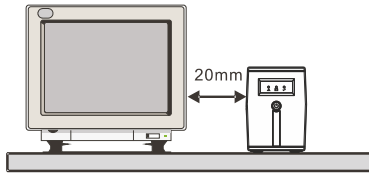


### 4. Connection

Plug the UPS into a 2-pole, 3-wire grounded receptacle. Then connect one computer-related device into each of the power receptacles supplied on the back of the UPS.

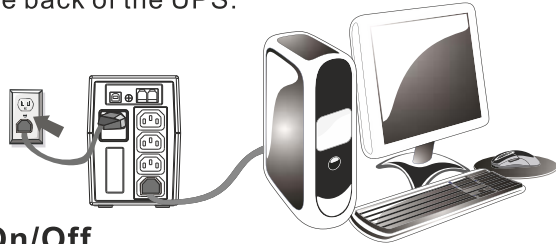

### 5. Turn On/Off

To turn on the UPS unit, press the power switch lightly. To turn off the UPS unit, press the power switch again.

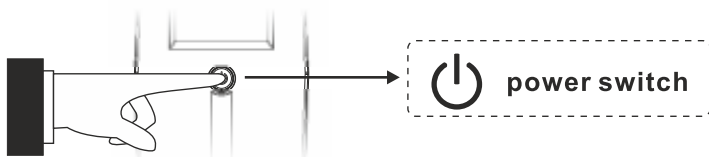

### 6. DC Start

All Series are equipped with DC Start. To start the UPS when AC utility power is not available, simply press the power switch.

- ★ During the installation of this equipment it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.
- ★ Beware of the possibility of electric shock when disconnecting of this unit from the mains, hazardous voltage may still be accessible through supply from the battery. The battery supply should therefore be disconnected from the plus and minus terminals of the battery when maintenance or service work inside the UPS is necessary

## INTRODUCTION



This UPS is specially designed for Personal Computer with multi-functions. Its light weight, compact design perfect fits to the limited working environment. The line of UPS is equipped with boost and buck AVR to stabilize input voltage range. It is also built-in with DC start function. This function enables the UPS to be started up without AC power supplied. Although it's a small UPS, The main features of UPS are listed below:

- Microprocessor control guarantees high reliability.
- Equipped with Boost and Buck AVR.
- Green Power Function for energy saving.
- DC Start Function.
- Auto restart while AC recovery.
- Compact size, Light Weight.
- Provides AC Overload protection.

## TROUBLE SHOOTING


Symptom	Possible Cause	Remedy
No LCD lighting or no LED display on front panel	1. Battery weak.	1. Charge battery up to 8 hours.
	2. Battery defect.	2. Replace with the same type of battery.
	3. Power switch is not pressed.	3. Press the power switch again.
Alarm buzzer beeps continuously when AC supply is normal.	Overload of the UPS.	Verify that the load matches the UPS capability specified in the specs.
When power failure, back-up time is shorten.	1. Overload of the UPS.	1. Remove some non-critical load.
	2. Battery voltage is too low.	2. Charge battery 8 hours or more.
	3. Battery defect due to high temperature operation or improper operation to battery	3. Replace with the same type of battery.
Mains normal but battery mode indicator lights (LCD model) or Yellow LED flashing (LED model)	Power cord is loose.	Reconnect the power cord properly.

If any abnormal situations occur that are not listed above, please call service people immediately.

# SYSTEM DESCRIPTION

## Front panel:


1. Power Switch
2. LED Indicators –  
AC Mode: Green LED lighting (400-1200VA) / The left green LED lighting & the 1st to 4th green LEDs gradually lighting indicating load level (1500-2000VA)  
Battery Mode: Yellow LED Flashing (400-1200VA) / The left green LED flashing & the 1st to 4th green LEDs gradually lighting indicating battery capacity (1500-2000VA)  
Fault Mode: Red LED Lighting
3. LCD

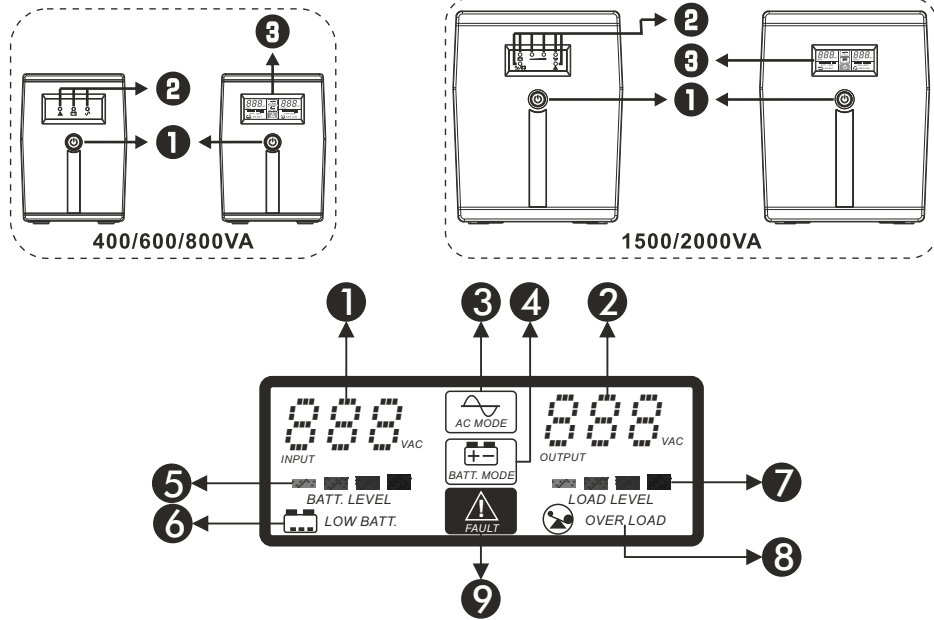

1. Input Voltage
2. Output Voltage
3. AC mode (UPS in AVR mode, this LCD symbol flashes)
4. Battery mode (when AC input voltage is abnormal, this LCD symbol lights)
5. Battery level (Battery capability)
6. Low battery (when battery voltage is low, this LCD symbol flashes)
7. Load level (Load percent)
8. Over load (when there is output over loading, this LCD symbol flashes)
9. Fault mode (this LCD symbol lights when UPS in fault mode, such as output shorted, over charge, over load)

## Back Panel:

1. AC input
2. Output receptacles
3. USB & RJ11 communication
4. USB & RS232 communication
5. RJ45
6. Circuit breaker

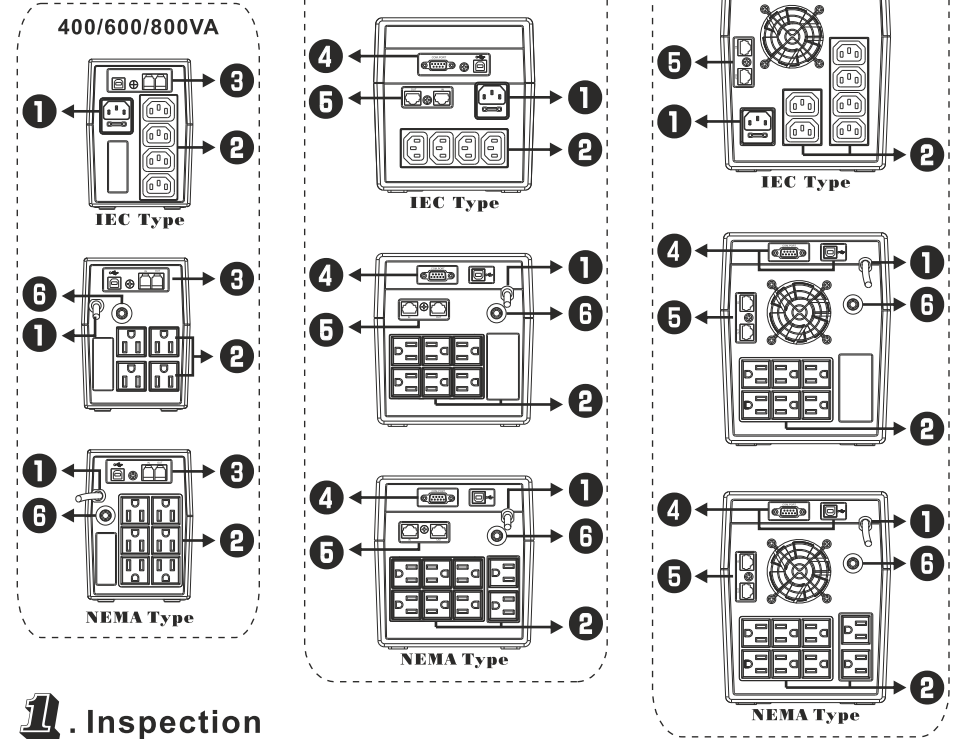

## 1. Inspection

Remove the UPS from its packaging and inspect it for damage that may have occurred during shipping. If any damage is discovered, repack the unit and return it to the place of purchase.

## 2. Charging

This unit is shipped from the factory with its internal battery fully charged, however, some charge may be lost during shipping and the battery should be recharged prior to use. Turn on the UPS, Plug the unit into an appropriate power supply and allow the UPS to charge fully by leaving it plugged in for at least 6 hours with no load (no electrical devices such as computers, monitors, etc.) connected.

